

## **Characteristics**













Continuous Detatchable Dutv

Tank

Dry Recovery

HEPA Optional

ULPA Optional

Pharma Cleanroom Applications Applications



- HEPA Filter Optional with an efficiency of 99.995% on 0.3 micron. Tested: IEST RP-CC001.3. H14 by MPPS method as per EN 1822. Or ULPA Filter - Optional with an efficiency of 99.999% on 0.12 micron. Tested: IEST RP-CC001.3. Filtration efficiency of 99.9995% on 0.18 micron. Tested: IEST RP-CC001.3. U15 by MPPS method as per EN 1822. Or
- \*Cleanroom compatible·
- Designed to be attached to process machines and for general cleanup in the food industry
- Can be used for the recovery of tablets in the pharmaceutical industry
- Continuous duty single or 3-phase motor mounted vertically
- Available with Manual Reverse Purge (MRP)
- Available in a fixed or mobile unit
- For dry recovery only
- · Available in all stainless steel, white powder coated or half stainless/half white powder coated construction
- Vertical mounting for areas with space constraints. Unit has a small environmental footprint
- Equipped with 4 wheels

Tiger-Vac's newest line of vacuum cleaners desgined to be attached to process machines and for general cleanup for the Food Industry. This unit can also be used for the recovery of tablets in the pharmaceutical industry. Available in all stainless steel, white powder coated or half stainless/half white powder coated construction. This unit is available with an optional true Hepa (H14) / Ulpa (U15) Filter located downstream outside of the motor housing. AEquipped with Manual Reverse Purge (MRP) system. The vacuum cleaner is mounted on 4 wheels with locks for easy manoeuverability and facilitates access to processing equipment when used as a mobile unit. Vertical mounting for areas with space constraints. Unit has a small environmental footprint. All of our ULPA vacuum cleaners are Aerosol Leak Tested before leaving our facility.

## **Specifications**

	Unit	CD-2600 CR (MRP) - P/C & S/S	CD-2600 CR (MRP) - P/C & S/S	CD-2600 CR (MRP) - STAINLESS STEEL	CD-2600 CR (MRP) - STAINLESS STEEL
Part#		111453B1	111454B1	111457B1	111458B1
Weight	lbs	247	247	247	247
Filter Cleaning		MRP	MRP	MRP	MRP
Decibels	dB	68	68	68	68
Dimensions	Inches	H75 × W26 × L34	H75 × W20 × L26	H75 × W20 × L26	H75 × W20 × L26
Dry Recovery	Gal	9.5	9.5	9.5	9.5
Vacuum Pressure	Inches H₂O	130	140	130	140
Air Flow	CFM	194	200	194	200
Phase		Three	Three	Three	Three
Horse Power	НР	2.9	5	2.9	5
Amperage	Α	6	7.4	6	7.4
Wattage	W	2200	3700	2200	3700
Hertz	Hz	50	50	50	50
Voltage	V	400	400	400	400
Plug		Not Inc.	Not Inc.	Not Inc.	Not Inc.

# **High Efficiency Particulate Air Filter**

A HEPA filter is a type of air filter, which means it filters the air coming in or out of the vacuum cleaner system. It can remove at least 99.99% of dust, pollen, mould, bacteria and any other airborn particles with a size of 0.3 micron or larger.

North-America: Each HEPA Filter has a minimum filtration efficiency of 99.99% on 0.3 micron. Tested as per IEST-RP-CC001.3 and OSHA compliant.

Europe: Each HEPA Filter has a minimum filtration efficiency of 99.995% on 0.3 micron, rated H14 as per EN 1822 by MPPS method.

### **Ultra Low Penetration Air Filter**


A ULPA filter is a type of air filter. It can remove at least 99.999% of dust, pollen, mould, bacteria and any other airborn particles with a size of 0.12 microns or larger.

North-America: Each ULPA Filter has a minimum filtration efficiency of 99.999% on 0.12 micron. Tested as per IEST-RP-CC001.3.

Europe: Each ULPA Filter has a minimum filtration efficiency of 99.9995% on 0.18 micron, rated U15 as per EN 1822 by MPPS method.

Tel: +(44)0115 928 1508

## **Manual Reverse Purge System**

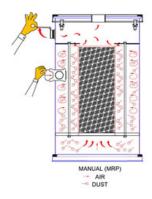

The Manual Reverse Purge (MRP) System allows the operator to not have to open the vacuum cleaner in order to clean the Cartridge. By opening the Reverse Purge Atmospheric Pressure Release Valve the Cartridge is automatically purged of dusts. This Purging System reduces maintenance down time.

The Manual Reverse Purge (MRP) works by :

- 1 Closing the slider on the opening to block the suction intake orifice for approximately 5 seconds while the vacuum is running.
- 2 Then quickly open Purge Valve. Air is now flowing via the valve through to the filter.

Keep Purge Valve open for 1-2 seconds then close (repeat above steps 2 or 3 times).

Reverse Purge System will cause dust to fall off of the filter.

HEPA/ULPA FILTERS AND ACCESSORIES - Optional				
Part#	Qty	Description		
213182	1	HEPA FILTER (H14) W/GASKET, Ø13.8125"(35.1cm)x3.875"(98.4mm) HIGH		
213181	1	ULPA FILTER (U15), Ø13.8125" x 3.875"(35.1cm X 98.4mm) HIGH, RATED 250 CFM		
215014B	1	HEPA HOUSING FOR CD-2600-STD, CRS -POWDER COATED		
215012	1	HEPA HOUSING FOR CD-2600 -STAINLESS STEEL 304		

REVERSE PURGE FILTER CARTRIDGE - Included			
Part#	Qty	Description	
214182A	1	FILTER CARTRIDGE, ALUMINIZED SPUN BOND POLYESTER, 16"H x 3.63"ID x 7.932"OD,1" PLEATS, 13 SQ.FT	

POLY LINER RECOVERY BAGS AND ACCESSORIES - Optional			
Part#	Qty	Description	
214987	1	POLY LINER -CLEAR WITH DRAW STRING (PACKAGE OF 5)	
213780	1	POLY LINER RETAINER PLATE WITH CLIP	

CONNECTION/SUCTION HOSES AND ACCESSORIES - Optional			
Part#	Qty	Description	
500390	1	CLEAR URETHANE SUCTION HOSE SD* Ø2"(50mm) LIGHT WEIGHT&ABRASION RESISTANT (SOLD PER FOOT)	
635078	1	CLEAR URETHANE SUCTION HOSE SD* Ø2.5"(64mm) LIGHT WEIGHT & ABRASION RESISTANT (SOLD PER FOOT)	
500159	1	CLAMP, TRIDON (SCREW TYPE) SIZE 32 -STAINLESS STEEL	
635016	1	HOSE CLAMP -STAINLESS STEEL SCREW TYPE FOR Ø2.5"(64mm)HOSE	
500198	1	HOSE CUFF EXPANDER FOR Ø2"(50mm)VACUFLEX HOSE TO Ø2.5"(63.5mm)ADAPTOR (500168+635248)	
500168	1	HOSE CUFF Ø2"(50mm) FOR Ø2"(50mm) VACUFLEX HOSE	
635248	1	HOSE CUFF FOR Ø2.5"(64mm) WIRE SUPPORTED HOSE	

Tel: +(44)0115 928 1508

#### **WARNINGS:**

Do not use this vacuum cleaner to recover explosive dusts or flammable liquids